

Diagnostic Information for S60, V70 and S80

By Philippe Bruno, B.Eng. and Shawn Deonarine

To show diagnostic information in the text window:

- Turn key to position II or start the engine.
- Press and hold down [READ] on the turn signal lever, and press the rear fog light button 3 times quickly.
- Press [READ] to advance to the next item.

Text Window	Description
CHECKING DTCS	Checking the Diagnostics Trouble Codes.
DTCS IN VEHICLE	Diagnostics Trouble Codes present in vehicle.
DTCS IN VEHICLE BCM DTC SET	Brake Control Module.
DTCS IN VEHICLE SAS CHECKING	Steering Wheel Angle Sensor.
DTCS IN VEHICLE SRS CHECKING	Safety Restraint System
DTCS IN VEHICLE ECM DTC SET	Engine Control Module
DTCS IN VEHICLE AUM READY	Audio Module
DTCS IN VEHICLE CEM DTC SET	Center Control Module
DTCS IN VEHICLE DIM READY	Driver Information Module
DTCS IN VEHICLE DDM DTC SET	Driver Door Module
DTCS IN VEHICLE CCM CHECKING	Climate Control Module
DTCS IN VEHICLE PDM DTC SET	Passenger Door Module
DTCS IN VEHICLE PSM CHECKING	Front Seat Module
DTCS IN VEHICLE REM CHECKING	Rear Electric Module
DTCS IN VEHICLE SWM READY	Steering Wheel Module
DTCS IN VEHICLE UEM READY	Upper Electronic Module